



E810-RS-U01 User Manual

USB to RS485/RS232 Serial Converter





Contents

Disclaimer	3
1 Overview	4
1.1 Introduction	4
1.2 Function	4
2 Parameters	4
2.1 Operating Parameters	4
3 Pin Definition	5
4 Driver Installation	5
Revision History	6
About Us	6

Disclaimer

EBYTE reserves all rights to this document and the information contained herein. Products, names, logos and designs described herein may in whole or in part be subject to intellectual property rights. Reproduction, use, modification or disclosure to third parties of this document or any part thereof without the express permission of EBYTE is strictly prohibited.

The information contained herein is provided “as is” and EBYTE assumes no liability for the use of the information. No warranty, either express or implied, is given, including but not limited, with respect to the accuracy, correctness, reliability and fitness for a particular purpose of the information. This document may be revised by EBYTE at any time. For most recent documents, visit www.ebyte.com.

1 Overview

1.1 Introduction

E810-RS-U01 is an intelligent universal converter that converts USB signal to RS485/RS232 signal. It is designed in accordance with universal standards. It solved the superposition of valid and invalid signals on the transmission circuit, error-free data transmission speed is as high as 1M.



1.2 Function

- Fits with all 485 and 232 serial interfaces;
- USB direct power supply, without external power supply, provides stable performance;
- With receiving and sending indicators to monitor the data transmission status;
- For Win 98, Win 2000, XP/Vista/Win 7, Win 8, Linux;
- Max. baud rate is 1M for RS485, and 230460bps for RS232.

2 Parameters

2.1 Operating Parameters

Operating voltage	5V
Serial baud rate	RS485: 300~1Mbps RS232: 300~230400bps
System	Win98, 2000, XP/Vista/Win7, 8, Linux, etc.
Operation temperature	-40~85°C
Operation humidity	RH: 5%~95%
Dimension	70×27×12mm

3 Pin Definition



Pin No.	Name	Signal
1	A	RS485 device A
2	B	RS485 device B
3	GND	RS232 GND
4	RXD	RS232 TXD
5	TXD	RS232 RXD
6	USB	USB 2.0 port

4 Driver Installation

Download drive: http://www.wch.cn/downloads/CH341SER_EXE.html

Revision History

Version	Rev. Date	Remark	By
1.0	2022-1-5	First version	LM
1.1	2022-08-15	Modify the description	LM
1.2	2022-09-07	Content revision	XXN

About Us

Technical support: support@cdebyte.com

Documents and RF Setting download link: <https://www.cdebyte.com>

Thank you for using Ebyte products! Please contact us with any questions or suggestions: info@cdebyte.com

Phone: +86 028-61399028

Web:<https://www.cdebyte.com>

Address: B5 Mould Industrial Park, 199# Xiau Ave. High Tech Zone, Chengdu, Sichuan, China

 **Chengdu Ebyte Electronic Technology Co.,Ltd.**